

INSTRUCTIONS FOR CREATING PART NUMBERS

1. Select one code (in bold) from each column. List option codes in the order that they appear in the column.
2. Follow your usual process to issue a purchase order, or complete a specification for standards.

THREE-PHASE VOLTAGE RESET FAULT INDICATOR WITH CABLE-MOUNTED PHASE SENSOR								
Underground Phase Designation	Voltage Reset	Display	Nominal Trip Rating	Inrush Restraint	Options	Delayed Trip	Core Mounting Diameter Range	kV Class
3 Three-Phase	VRP	V Standard Remote	1200 1200 A	IR	— No Options	DT Delayed Trip (24 ms)	— Standard Core (0.75"–2.1")	9 35 kV
	Voltage Reset From BIP Test Point		1500 1500 A		A Auxiliary Contact		L Large Core (1.8"–2.5")	

Example Part Number: **3VRPV1200IRDTL9**