

Overview

The SEL-700 Series Industrial Configurable Labels Kit provides the materials and information needed to customize the target LED and operator control pushbutton areas of the front panel. *Figure 1* shows a typical SEL-700 Series relay with pocket areas and openings.

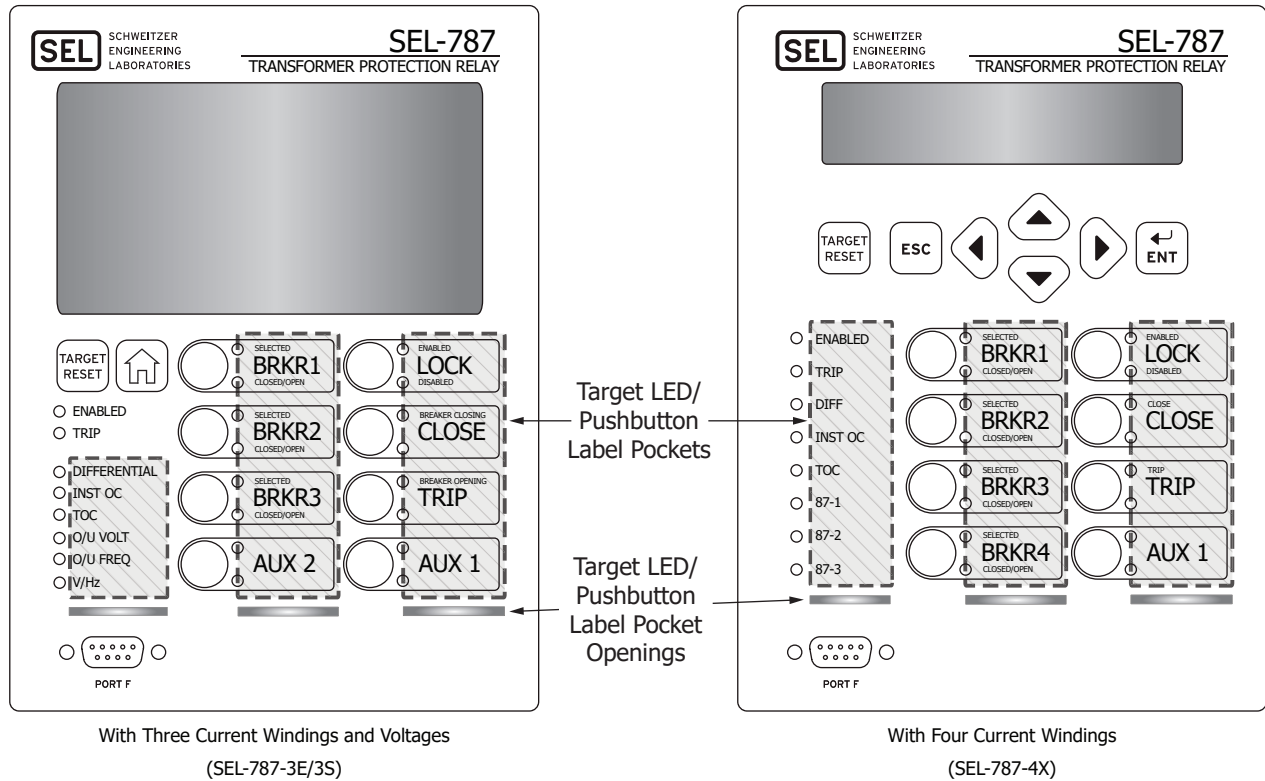


Figure 1 Typical Configurable Label Areas on SEL-700 Series Relays

Note that some of the SEL-700 Series Relays have only four pushbuttons instead of the eight pushbuttons shown in *Figure 1*.

These instructions apply to all SEL-700 Series industrial products except the SEL-701 Relay, SEL-734 Meter, and SEL-749M Motor Relay.

SEL-700 Series Relays feature a versatile front panel that you can customize for your needs. Use SELOGIC[®] control equations and slide-in, configurable front-panel labels to change the function and identification of target LEDs and operator control pushbuttons and LEDs.

SEL-700 Series Relays come with the default card set integrated into a sublayer of the overlay. Prior relays were shipped with pre-printed, removable labels. You can use the blank labels provided in this kit to print your own customized labels and insert them in the front-panel pockets.


If you need additional configurable label kits, contact your Technical Service Center or the SEL factory (see *Technical Support on page 3*). See *Table 1* for part number information.

Table 1 SEL-700 Series Configurable Labels Kit Part Number Information

Products	Number of Sheets	Kit Number
700G, 710, 751A, 787 (with 4 pushbuttons)	2	9260134
700G, 710, 751A, 787 (with 4 pushbuttons)	25	9260135
700BT, 700G, 710-5, 751 ^a , 787-2,-3,-4, 787L, 787Z (with 8 pushbuttons)	2	9260136
700BT, 700G, 710-5, 751 ^a , 787-2,-3,-4, 787L, 787Z (with 8 pushbuttons)	25	9260137

^a For the SEL-751 with four pushbuttons, use kit 9260136 or 9260137 and discard the pushbutton pocket label in the center.

Removing Labels

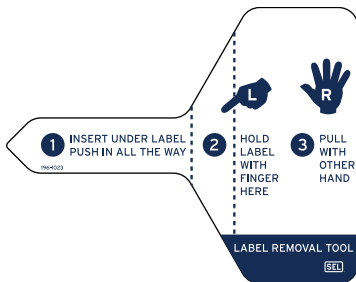

If your device has pre-printed, removable labels, use the label removal tool to remove labels from the front-panel pockets.

- Step 1. Slide the tip of the tool under the label at the pocket opening (see *Figure 1* for example opening locations).
- Step 2. Push the exposed edge of the label against the label removal tool while pulling out both the label and label removal tool.

Creating Laser-Printed Labels

NOTE: The default template font is from the Arial family. You can use this font or choose a different font that is available on your computer system.

NOTE: You can adjust the font size to accommodate more text within the cell.

Use the following procedure to create laser-printed labels. You can find label template files on the SEL website (selinc.com). In addition, these files are included on the Product Literature CD shipped with the product.

Step 1. Open the appropriate Microsoft® Word template.

Step 2. Fill in the fields.

Use the Tab and Arrow keys or your mouse to move from field to field. Field space is limited; only the text that displays on the screen prints on the label.

Save the file often to preserve your work in progress.

Step 3. Test the position of the label text.

- a. Print the template file to plain paper.
- b. Examine the printed sheet for proper alignment. Carefully compare the printed page to the perforated stock sheets.
- c. If the printed sheet is not aligned properly, proceed to *Step 4*.
- d. If the labels appear as desired, proceed to *Step 5*.

- Step 4. Make adjustments to margin settings, as necessary, to print in the proper location on the test sheet.
- Use the **Page Setup** dialog box to adjust only the top or left margins as needed to correct the alignment.
Do not adjust the right or bottom margins.
 - Do another test print on plain paper.
 - Examine the label position.
 - Repeat as necessary until the alignment is correct.
- Save the file often to preserve your work in progress.

NOTE: Place the perforated stock sheet in the printer tray as indicated by the printer (either face up or face down).

Also, if your printer has duplex capability, be sure to set the printer to print single sided.

- Step 5. Print the labels on the perforated stock sheets.

If the labels printed incorrectly, repeat this procedure beginning with *Step 3*.

- Step 6. Fold and tear the perforated edges of the stock paper to remove the labels from the sheet.

If your device has pre-printed, removable labels, remove the existing labels from the front-panel label pockets with the label removal tool.

- Step 7. Insert the newly created labels in the appropriate pockets on the front panel.

Technical Support

We appreciate your interest in SEL products and services. If you have questions or comments, please contact us at:

Schweitzer Engineering Laboratories, Inc.
2350 NE Hopkins Court
Pullman, WA 99163-5603 U.S.A.
Tel: +1.509.338.3838
Fax: +1.509.332.7990
Internet: selinc.com/support
Email: info@selinc.com

© 2014-2024 by Schweitzer Engineering Laboratories, Inc. All rights reserved.

All brand or product names appearing in this document are the trademark or registered trademark of their respective holders. No SEL trademarks may be used without written permission. SEL products appearing in this document may be covered by U.S. and Foreign patents.

Schweitzer Engineering Laboratories, Inc. reserves all rights and benefits afforded under federal and international copyright and patent laws in its products, including without limitation software, firmware, and documentation.

The information in this document is provided for informational use only and is subject to change without notice. Schweitzer Engineering Laboratories, Inc. has approved only the English language document.

This product is covered by the standard SEL 10-year warranty. For warranty details, visit selinc.com or contact your customer service representative.

SCHWEITZER ENGINEERING LABORATORIES, INC.

2350 NE Hopkins Court • Pullman, WA 99163-5603 U.S.A.

Tel: +1.509.332.1890 • Fax: +1.509.332.7990

selinc.com • info@selinc.com

