




Installation Instructions for SEL-TPR

3-Phase, Remote Large Target, 600 A Junction Shield

Before installation of fault indicators and sensors, read and understand all instructions in their entirety. For assistance, contact Customer Service at (509) 332-1890 or by email at info@selinc.com.

⚠ CAUTION


Install fault indicators and sensors in accordance with normal safe operating practices. These instructions are not intended to replace or supersede existing safety or operating requirements. Only trained qualified personnel should install or operate fault indicators and sensors.

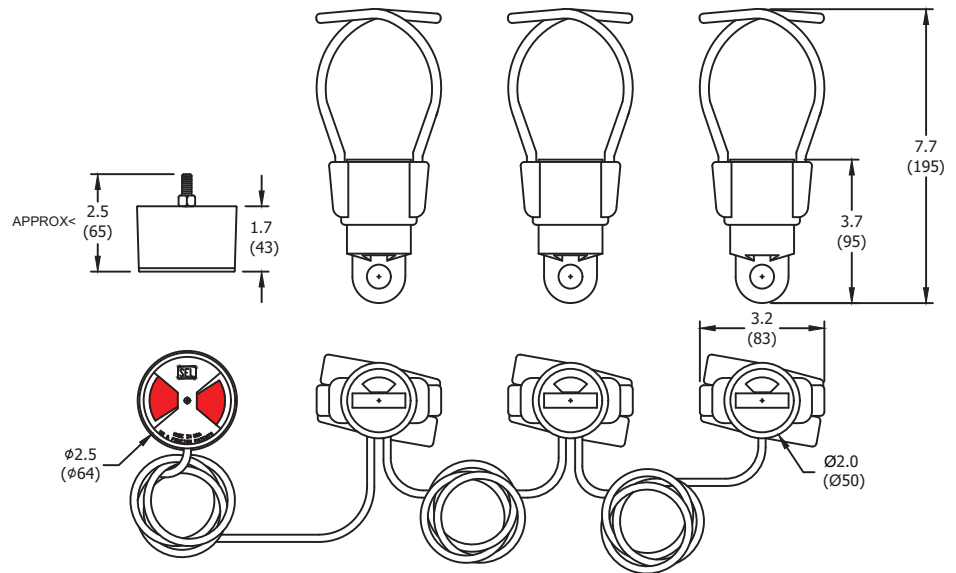

Install the Display


- Mount the stainless-steel bracket to position the “L” display for optimum viewing.
- Use the integral threaded stud and hex nut to mount the display to the bracket. Hand tighten the hex nut. Do not overtighten.

Note: Optional Display Panel Mount Kits are sold separately. Consult the factory for ordering information.

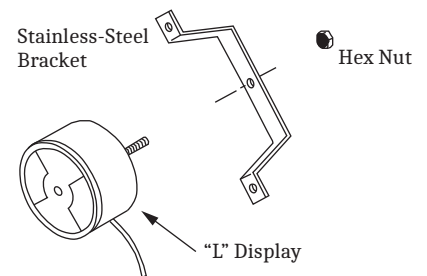

Install the Internal Adapter Ring (if Required) and the Phase Sensor(s)





- Elastimold 15, 25, and 35 kV PCE elbows with molded test points require the internal adapter rings. Complete Steps A–H.
- Hubbell, Chardon, RTE, Cooper, or GE-Chardon elbows with molded test points do not require the adapter ring. Complete Steps E–H only.

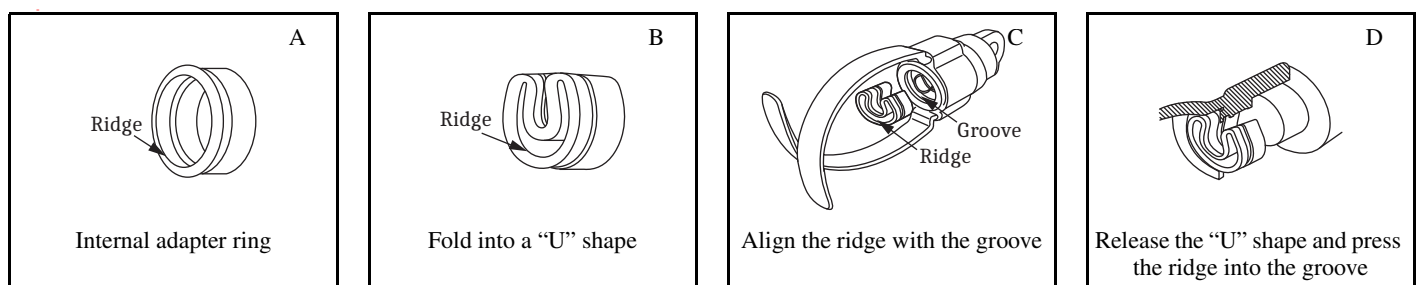



Installation Instructions for SEL-TPR

3-Phase, Remote Large Target, 600 A Junction Shield

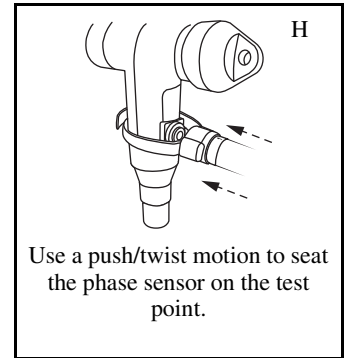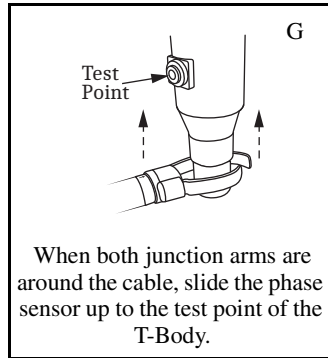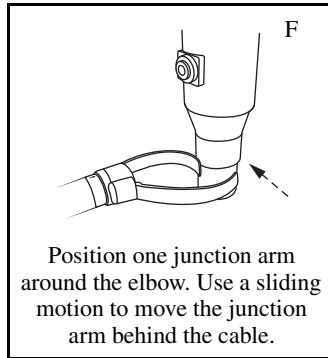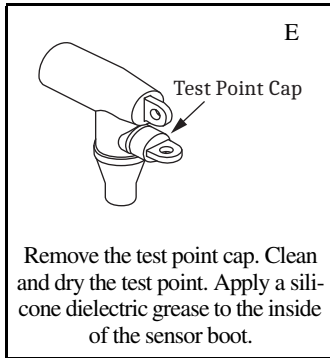

Magnetic Cable Guides hold cables and leads neatly within the enclosure.

Catalog Number: MCG



SCHWEITZER ENGINEERING LABORATORIES, INC.

2350 NE Hopkins Court • Pullman, WA 99163-5603 U.S.A.
Phone: +1.509.332.1890 • Fax: +1.509.332.7990
selinc.com • info@selinc.com



25-0217.A

Page 2 of 2