




# Installation Instructions for LINAM MR

## Manual Reset Fault Indicator With Pushbutton

Before installation of fault indicators and sensors, read and understand all instructions in their entirety. For assistance, please contact Customer Service at (509) 332-1890 or by email at info@selinc.com.

### CAUTION

Install fault indicators and sensors in accordance with normal safe operating practices. These instructions are not intended to replace or supersede existing safety or operating requirements. Only trained qualified personnel should install or operate fault indicators and sensors.

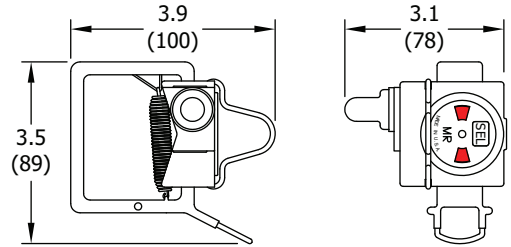

Preferred	Acceptable				Incorrect	Neutral Training for Phase Sensor
						<p>The way the neutral is trained and the correct placement of all FCI sensors are essential for proper function of the FCI.</p> <p>Shown are several methods of neutral training. Note the position of each FCI sensor.</p> <p>Double-back training is the preferred method.</p> <p>Four acceptable methods are shown.</p> <p>The last method prevents proper FCI function. <i>Do not use this method</i> when applying FCI sensors.</p>

## Install the Phase Sensor

<p>Use a hot stick to grasp the molded hook eye on the face of the phase sensor.</p>	<p>Open the core. Using a switch stick and a pulling motion, position the MR core around the cable.</p>	<p>Position the cable in the "V" of housing. Using a switch stick, close the core around the cable.</p>	<p>Verify that the core is closed and properly mated. Remove the hot stick.</p>
--	---	---	---