



# Installation Instructions for LINAM VIN

## 1-Phase, Integral Neon Bulb, Test Point Sensor


Before installation, read and understand all instructions in their entirety. For assistance, please contact Customer Service at (509) 332-1890 or by email at info@selinc.com.

### ⚠ CAUTION

Install in accordance with normal safe operating practices. These instructions are not intended to replace or supersede existing safety or operating requirements. Only trained qualified personnel should install or operate fault indicators, voltage indicators, and/or sensors.

### ⚠ WARNING

Before working on the circuit, perform a backup test to be sure the circuit is de-energized. Voltage indicators will not illuminate if primary grounding occurs on a three-phase normally ungrounded delta-configured system, even though phase-to-phase voltages are present.

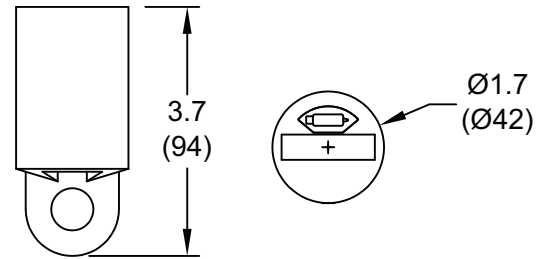

## Install the Internal Adapter Ring (if Required) and the Phase Sensor(s)

- ▶ Elastimold 15, 25, and 35 kV PCE elbows with molded test points require the internal adapter rings. Complete Steps A–G.
- ▶ Hubbell, Chardon, RTE, Cooper, or GE-Chardon elbows with molded test points do not require the adapter ring. Complete Steps E–G only.

